



- Set the base on a flat, steady surface and plug cord into a grounded wall outlet. (If your kettle has a removable power cord, attach the female end of the power cord to the base first.)
- · Lift off the lid and fill kettle with cold water.

IMPORTANT! Do not fill above the "max" fill line (1.2L).

Return kettle to the base.

- Fill the kettle to the Max fill line (1.2 L) (marked inside of kettle) with cold water.
- Replace the lid with holes facing away from the handle.
- Press the ON/OFF button to start boiling automatically.
- Bring water to a boil, then empty the kettle.
- Allow the appliance to cool down for 1 minute.
- Repeat twice before initial use.





- Press the °F / °C button to choose either Fahrenheit or Celsius.
- Press the TEMPERATURE SETTING button to choose a preset temperature.
- Press the [+] button to increase the temperature by one degree.
- Press the [] button to decrease the temperature by one degree.
- The temperature displayed on the screen will be stored after three (3) seconds.
- Once the temperature is set, it will be stored in memory and will be recalled the next time the kettle is turned on.
- · During the heating cycle, the LCD will display the current water temperature.



- To stop the heating process, press the ON/OFF button or remove the kettle from the base.
- To resume heating, return kettle to base and press the "ON/OFF" button.
- · When the set temperature is reached, three audible beeps are emitted.

WARNING: Never set the temperature above the boiling point. Refer to the "High Altitude Users" section in the owner's manual to determine the boiling temperature for your altitude.

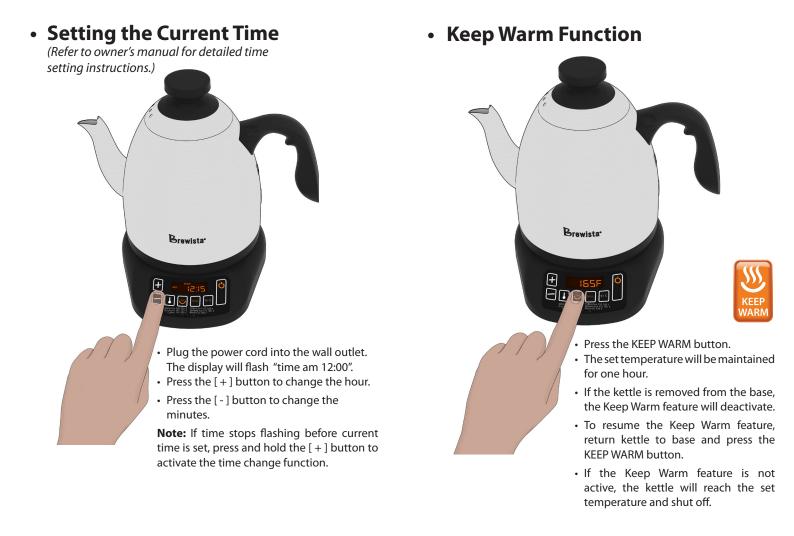

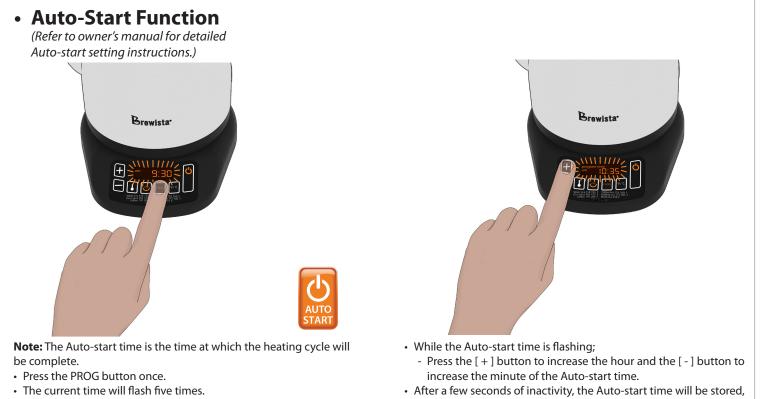

- If it is necessary to adjust the current time;
 - Press the [+] button to increase the hour and the [-] button to increase the minute of the current time.
- After a few seconds of inactivity, the current time will be stored, and the LCD will flash the Auto-start time.
- After a few seconds of inactivity, the Auto-start time will be stored, and the LCD will flash the programmed temperature setting.
 - Press [+] and [-] buttons to set desired temperature.
 - The temperature will be stored after a few seconds of inactivity.
- If the Auto-start time and current time are less than 8 minutes apart, heating begins immediately.

Count-Up Timer Feature



• Washing Instructions

- Remove the kettle from the base.
- The LCD will display "0:00".
- Press the [+] button to start the count-up timer.
- The maximum count-up time is 7 minutes.
- Return the kettle to the base then lift it off again to reset the timer to zero.



- Remove the kettle from the base.
- Clean the outside of the base and the kettle with a damp, soft cloth or sponge. A bottle brush may be used to clean the interior of the kettle.
- Clean the inside of the kettle with dish detergent and rinse thoroughly with water.
- Do not use abrasive cleaners.
- After cleaning, dry the kettle and the base thoroughly.

WARNING: Never immerse the kettle or the base in water or other liquids.

Descaling

- When mineral scale builds up in the kettle, it can affect temperature consistency and slow down heating time.
- To ensure optimum performance, Brewista recommends descaling the kettle when mineral build-up is visible inside the kettle.

Note: Vinegar may not effectively descale the kettle and can be difficult to thoroughly rinse. Vinegar may also leave behind an odor that could affect future use.

Brewista recommends using Cafetto™ Descaler.



How to use Cafetto[™] Descaler:

- Mix 1 packet Cafetto[™] Descaler with 40 oz. of lukewarm water.
- Pour the solution into the kettle.
- Bring the solution to a boil.
- Let the vessel cool for 15 minutes, then discard the solution.
- Rinse thoroughly with fresh water.





BSS12VTK Series

Brewista

1133 W. 27th Street, Cheyenne, WY 82001, USA | www.mybrewista.com Toll Free in North America: 888-538-8683 | Local: 307-222-6086

Srewista®