

Brewista® Artisan

BA6VK Series

GOOSENECK KETTLE

600 ml Variable Temperature Kettle



Scan for video



QUICK START GUIDE

Start Here

. Features



- Displays temperature in Fahrenheit or Celsius
- Includes preset temperatures for popular hot beverages
- Retains last temperature settings when powered off
- Allows user to set and hold water temperature for up to one hour
- Durable food grade stainless steel
- Count-up timer feature
- Detachable power cord

. What's in the box?



 
600 ml Gooseneck Spout Digital Kettle

Removable Power Cord




Base

. Layout

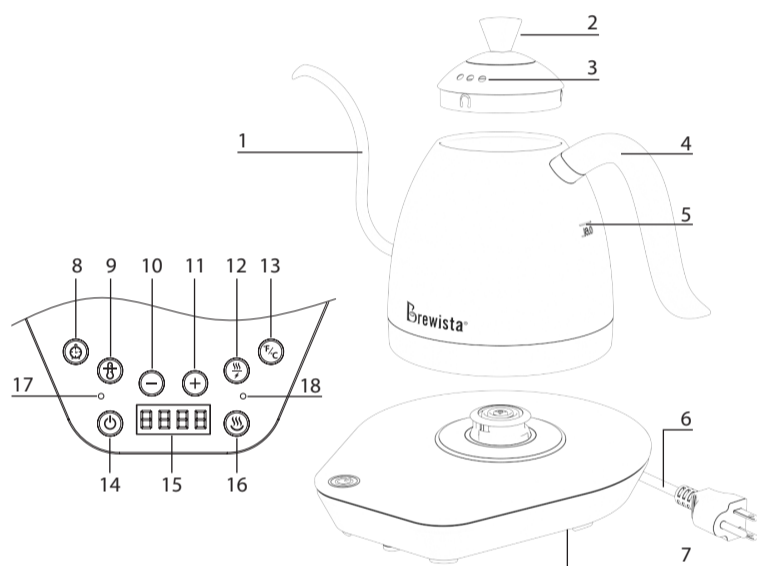

- | | |
|-------------------------------|-----------------------------------|
| 1) Spout | 10) [-] button |
| 2) Lid | 11) [+] button |
| 3) Vent Holes | 12) FAST BOIL Button |
| 4) Handle | 13) Display degree °F / °C button |
| 5) Max water level indicator | 14) ON/OFF button |
| 6) Power cord with plug | 15) LCD Display |
| 7) Base | 16) KEEP WARM button |
| 8) Count-up TIMER Button | 17) Heating Indicator Light |
| 9) TEMPERATURE SETTING button | 18) Keep Warm indicator Light |

 . Setting Up the Kettle

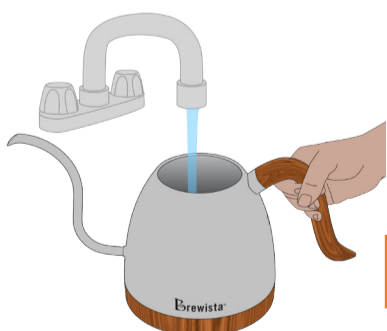


- Set the base on a flat, steady surface and attach the female end of the power cord to the base.
- Plug the cord into a grounded wall outlet.
- Lift off the lid and fill kettle with cold water.

IMPORTANT! Do not fill above the "Max" fill line (0.6L)

- Return kettle to the base.

 . First Time Use

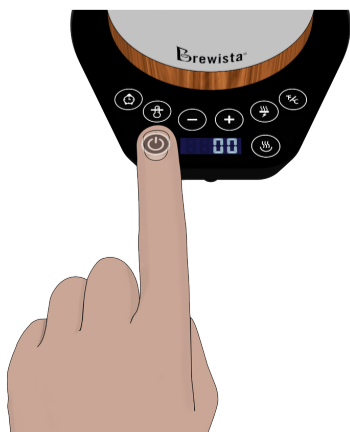

- Fill the kettle to the Max fill line (0.6 L) (marked inside of kettle) with cold water.
- Replace the lid with holes facing away from the handle.
- Press the ON/OFF button and then the FAST BOIL button to start boiling automatically.
- Bring water to a boil, then empty the kettle.
- Allow the appliance to cool down for 1 minute.
- Repeat twice before initial use.

. Setting the Temperature

 
(Refer to owner's manual for detailed temperature setting instructions.)



- Press the °F / °C button to choose either Fahrenheit or Celsius.
- Press the TEMPERATURE SETTING button to choose a preset temperature.
- Press the [+] button to increase the temperature by one degree.
- Press the [-] button to decrease the temperature by one degree.
- The temperature displayed on the screen will be stored after three (3) seconds.
- Once the temperature is set, it will be stored in memory and will be recalled the next time the kettle is turned on.
- During the heating cycle, the LCD will display the current water temperature.

• Setting the Temperature (Continued)


(Refer to owner's manual for detailed temperature setting instructions.)

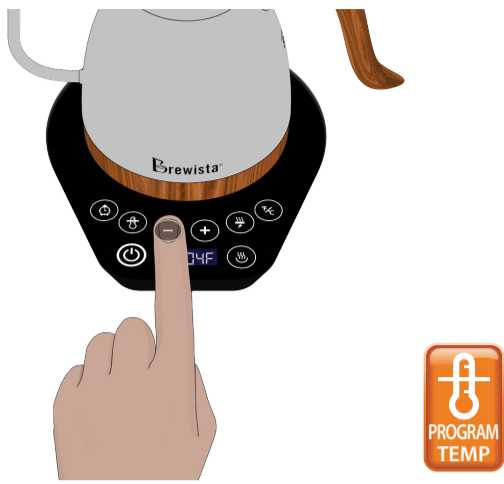

- To stop the heating process, press the ON/OFF button or remove the kettle from the base.
- To resume heating, return kettle to base and press the ON/OFF button.
- When the set temperature is reached, two audible beeps are emitted.


WARNING: Never set the temperature above the boiling point. Refer to the "High Altitude Users" section in the owner's manual to determine the boiling temperature for your altitude.

 • Fast Boil Function

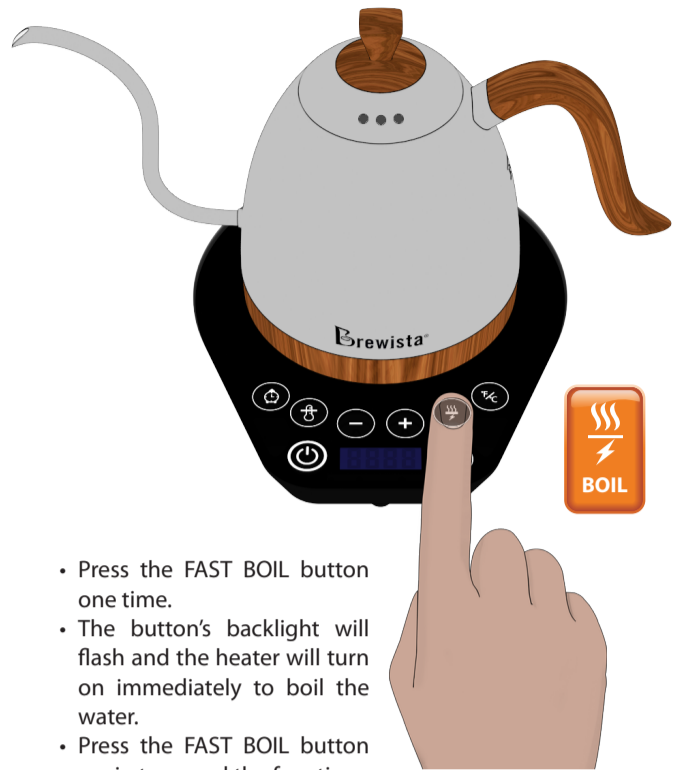

- Press the FAST BOIL button one time.
- The button's backlight will flash and the heater will turn on immediately to boil the water.
- Press the FAST BOIL button again to cancel the function.

 • Keep Warm Function

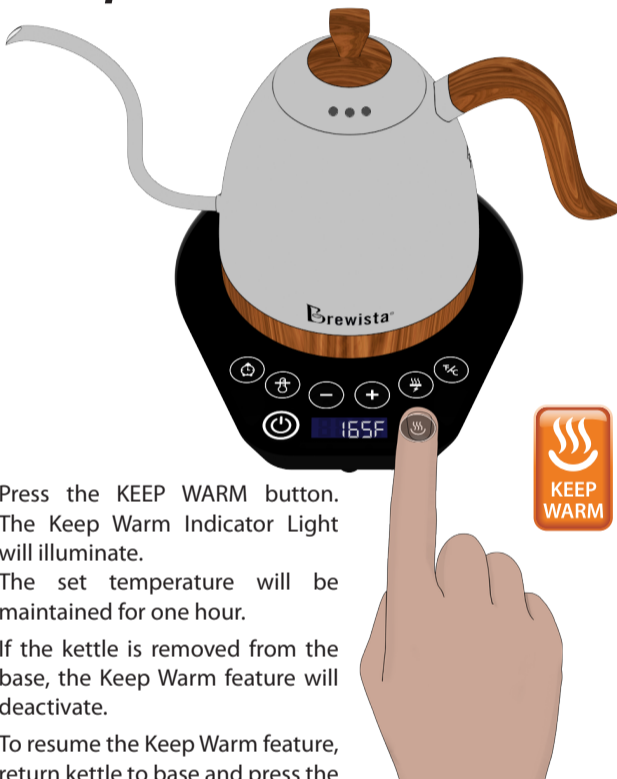

- Press the KEEP WARM button. The Keep Warm Indicator Light will illuminate.
- The set temperature will be maintained for one hour.
- If the kettle is removed from the base, the Keep Warm feature will deactivate.
- To resume the Keep Warm feature, return kettle to base and press the KEEP WARM button.
- If the Keep Warm feature is not active, the kettle will reach the set temperature and shut off.

• Count-Up Timer Feature



- Remove the kettle from the base.
- The LCD will display "00:00".
- Press the TIMER button to start the count-up timer.
- The maximum count-up time is 59'59".
- Press the TIMER button while timer is counting to stop the timer.
- Press the TIMER button a second time to return the timer to zero.
- When the kettle is removed from the base and then returned, the LCD will display current water temperature.

• Washing Instructions



- Remove the kettle from the base.
- Clean the outside of the base and the kettle with a damp, soft cloth or sponge. A bottle brush may be used to clean the interior of the kettle.
- Clean the inside of the kettle with dish detergent and rinse thoroughly with water.
- Do not use abrasive cleaners.
- After cleaning, dry the kettle and the base thoroughly.

WARNING: Never immerse the kettle or the base in water or other liquids.

• Descaling

- When mineral scale builds up in the kettle, it can affect temperature consistency and slow down heating time.
- To ensure optimum performance, Brewista recommends descaling the kettle when mineral build-up is visible inside the kettle.

Note: Vinegar may not effectively descale the kettle and can be difficult to thoroughly rinse. Vinegar may also leave behind an odor that could affect future use.

Brewista recommends using Cafetto™ Descaler.



How to use Cafetto™ Descaler:

- Mix 1/2 packet Cafetto™ Descaler with 20 oz (600 ml) of lukewarm water.
- Pour the solution into the kettle.
- Bring the solution to a boil.
- Let the vessel cool for 15 minutes, then discard the solution.
- Rinse thoroughly with fresh water.

