

# V60 CERAMIC DRIPPER 02 SET



## 取扱説明書

お買いあげ誠にありがとうございます。正しくご使用していただくため、この取扱説明書を必ずお読みください。また、お読みになりましたら、大切に保管してください。

**HARIO**

# おいしいコーヒーのいれ方

- 1 ペーパーフィルターのチャック部(破線部)を折り曲げ、ドリッパーの内部にセットし、コーヒー粉(中細挽き)を杯数分入れます。粉は少しゆすって平らにします。



山折り

\*1杯分10~12gが目安です。付属の計量スプーンはすりきり約12gです。

- 2 沸騰したお湯を火からおろし、お湯の静まりを待ちます。コーヒー粉の中心から粉全体がしめる程度にお湯をゆっくり注ぎ、30秒程蒸らします。



- 3 中心よりうず状にお湯を注ぎます。お湯を注ぐ時はペーパーフィルターに直接かからないように注ぎ、抽出時間は杯数分に関係なく3分を目安とします。



\*ペーパーフィルターは、HARIO「V60用ペーパーフィルター-02」をご使用ください。

## 材質のご案内

---

ドリッパー

磁器



取っ手 / フタ

ポリプロピレン  
耐熱温度：140℃

ガラス本体

耐熱ガラス  
耐熱温度差：120℃



V60 ペーパー

フィルター 100 枚入  
(VCF-02M)



計量スプーン

ポリプロピレン  
耐熱温度：120℃

●MADE IN JAPAN



---

## 製品についてのお問い合わせ先

# HARIO株式会社

〒103-0006 東京都中央区日本橋富沢町9-3  
フリーダイヤル:0120-39-8208  
<http://www.hario.com>

## お取扱上の注意

⚠ 電子レンジ以外の加熱器具は  
使用しないでください。



電子レンジ

⚠ 直火にかけられません。

⚠ ガラスは割れるものです。  
洗浄やご使用時はていねい  
にお取扱いください。



直火

⚠ お子様に使用させないでください。また、  
幼児のそばで使用したり、幼児の手の  
届く所に置かないでください。

⚠ 取っ手部分とガラス本体は分解できない  
構造になっております。危険ですので、  
絶対に分解しないでください。万が一  
取っ手の合わせ目が開いた場合は、  
使用しないでください。

- ご使用前には洗浄をしてください。
- ヒビ、欠け、強いすり傷の入ったものは、思わぬときに破損することがありますので、使用しないでください。
- ガラス本体の内面を、金属スプーンなどで強くたたいたり、強くこすったりしないでください。破損の原因になります。
- ガラス本体が熱いうちにぬれた布でふれたり、ぬれた台の上に置くと、急激な温度変化により破損する場合があります。おやめください。
- お飲み物をいれて凍らせないでください。また、冷蔵庫に入れる場合は、さましてから入れてください。
- 熱いお飲み物を入れると、プラスチック部分が軟化してバンドがゆるくなり、左右にずれることがあります。
- ご使用中に亀裂やゆるみなどの異常を感じた場合、絶対に使用しないでください。
- 破損した際のお取扱いは、ケガをしないよう十分ご注意ください。
- 廃棄する際は、各自治体の指示に従い分別してください。



ヒビ、カケ



たたく



ぬれた布



ぬれた台

## 電子レンジでのご使用上の注意

**⚠ 突然一気に沸騰して液体が激しく吹き出す恐れがあります(突沸現象)。電子レンジから取り出す際は顔などを近づけないでください。**

- 突沸現象については、弊社ホームページ[www.harrio.com](http://www.harrio.com)をご参照ください。
- 外側の水滴は拭き取ってから電子レンジに入れてください。
- 空だきや中身が少ない状態で使用しないでください。
- ご使用の際は、お手持ちの電子レンジの取扱説明書をよくお読みください。
- 電子レンジ加熱後は熱くなりますので、持ち運びの際は、なべつかみなどを使って器全体や取っ手を持ってください。また、ビニール製のテーブルクロスなど、熱に弱いものの上には置かないでください。台に置く際は必ずなべしきなどをご使用ください。
- 多機能レンジ(オープン機能・スチーム機能・トースター、グリル機能などのついた電子レンジ)で加熱する場合は、必ず電子レンジ機能のみで加熱してください。電子レンジ以外のモードまたは、自動モードで加熱すると、高温になりプラスチックがとける危険があります。

電子レンジでの 加熱時間の目安	容量	温める量	温める量
	ワット数	約450ml	約700ml
	500W	約4分半	約6分半
	600W	約4分	約5分半
	700W	約3分半	約4分半


※加熱の際は、フタをしたままレンジサーバーをターンテーブルの中心に置いてください。効率よく加熱できます。

## お手入れの方法

⚠️ 洗浄する場合はやわらかいスポンジに中性洗剤を使用してください。

⚠️ やわらかいスポンジでも、下図のようにクレンザーやガラスに傷のつく研磨材、または研磨粒子がついているスポンジなどは使用しないでください。思わぬときに破損する原因となります。

- 本製品は食器洗い乾燥機のご使用ができます。ご使用の際は、お手持ちの食器洗い乾燥機の取扱説明書をよくお読みください。
- ガラスの汚れのひどいときは「家庭用漂白剤」を薄めてご使用ください。その際「家庭用漂白剤」の取扱注意事項を必ずお守りください。漂白後は十分に水洗いしてください。

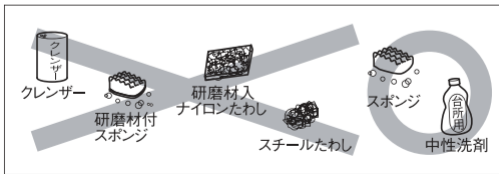

## 家庭用品品質表示法による表示

品名 耐熱ガラス製器具  
使用区分 電子レンジ用  
耐熱温度差 120°C

### 取扱い上の注意

- 調理の時は外側の水滴をぬぐい、途中で差し水をする時は冷水をさけ、またガラスの部分が熱くなっている時はぬれた布でふれたり、ぬれた所に置かないで下さい。
- 空だきをしないで下さい。
- 洗う時は、研磨材入りたわし、金属たわしやクレンザーなどを使用しないで下さい。
- 使用区分以外には使用しないで下さい。

HARIO株式会社

〒103-0006東京都中央区日本橋富沢町9-3

804426 XVDD-3012W 説明書1607



電子レンジ用



直火不可



●オープン直火は使用できません

※ドリッパーはハンドメイドのため、商品によって色味や風合いが異なることがあります。



# V60 CERAMIC DRIPPER 02 SET



## Instruction Manual

Thank you for purchasing this HARIO product.  
Please be sure to read this instruction manual  
thoroughly in order to use this product correctly.  
After reading it, store it in a safe place for future  
reference.

**HARIO**

# Brewing Delicious Coffee

---

- 1** Fold the jointed part of the paper filter (broken line section), set it inside the dripper, and pour in the necessary amount of coffee grounds (medium fine grind) for the amount of coffee you want to brew. Shake sideways gently to even out the coffee grounds.



\*Approximately 10 – 12g per cup.  
The attached measuring spoon  
= 12g / 1 spoon.

- 2** Remove the boiling water from the heat, and wait for it to become still. Slowly pour the hot water onto the center of the coffee grounds making sure that all the coffee grounds become wet, and allow to moisten for approximately 30 seconds.





- 3** Pour the boiling water in a spiral shape starting from the center. Be sure not to pour any water directly onto the paper filter. The brewing time should be approximately 3 minutes irrespective of the amount of coffee being brewed.



※Use HARIO “V60 Paper Filter 02”

# Material Guide

---

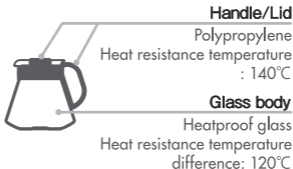

●MADE IN JAPAN

## Precautions for Use

⚠ Do not use this product with heating appliances other than microwaves.



Microwave oven

⚠ Do not expose to open flames.

⚠ Glass is fragile and may break. Handle it appropriately during normal use and cleaning.



Direct flame

⚠ Not to be used by children. Do not use near small children, or store within the reach of small children.

⚠ The handle cannot be detached from the glass body. Never attempt to detach the handle, as doing so is dangerous. Stop using this product immediately if a gap occurs between the jointed part of the handle.

- Wash the product before using for the first time.
- Do not use the product if it is cracked, broken, or heavily scratched as it may break unexpectedly.
- Do not strike or scrape the inside of the glass container with a metal spoon. Doing so may damage the product.
- Do not touch hot glass with a wet cloth, place them on a wet pot stand, or expose them to sudden changes in temperature. Doing so may damage the glass.
- Do not freeze this product when it contains liquid. Allow the product to cool before placing in the refrigerator.
- When a hot liquid is poured into the product, the plastic section may soften causing the band to loosen, resulting in the handle moving out of place to the left or right.
- Stop using the product immediately if you find any problems such as cracks or looseness.
- In the unlikely event the product becomes damaged, please handle any broken pieces with care.
- Follow local rules on garbage disposal when disposing of this product.



Crack, Chip



Tap




Wet cloth



Wet surface

## Precaution of Microwave oven use

 The liquid may boil suddenly, causing liquid to suddenly spray out (bumping phenomenon). Keep your face away from the product when removing from the microwave.


- Wipe off any water droplets from the outside of the decanter before placing in the microwave.
- Do not use empty or with very little inside.
- Consult the instruction manual of your microwave before use.
- The entire server becomes hot after heating in a microwave. Use oven gloves to hold the server or handle when carrying. Also, do not place directly onto items that are not heat resistant such as a vinyl tablecloth. Always place on a pot stand .
- When heating this product using a combination microwave (that has multiple functions such as oven, steam oven, toaster, and grill), be sure to only use the microwave function to heat this product. Using modes other than the microwave mode or automatic mode is dangerous as it may cause the product to overheat, melting the plastic.


Approximate microwave oven heating times	Capacity	Heating amount: Approx. 450ml	Heating amount: Approx. 700ml
	Wattage		
	500W	Approx. 4 mins 30 secs	Approx. 6 mins 30 secs
	600W	Approx. 4 mins	Approx. 5 mins 30 secs
	700W	Approx. 3 mins 30 secs	Approx. 4 mins 30 secs

※ To heat efficiently, place the server on the center of the turn table with the lid attached.


## Product Care

---

 Use a soft sponge and neutral detergent to clean this product.

 Do not use cleansers or sponges that contain abrasives, as doing so may scratch the glass.

- This product is dishwasher safe. Be sure to read the instruction manual provided with your dishwasher before use.
- If the glass is particularly dirty, use a diluted household bleach. Be sure to read the handling precautions of the household bleach thoroughly. Rinse thoroughly with water after bleaching.

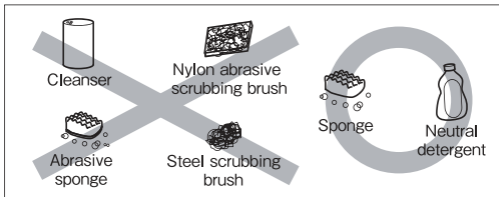



Dishwasher-safe



For Microwave

Do not expose to open flames

**HARIO CO., LTD.**

9-3 Nihonbashi Tomizawa-Cho,  
Chuo-ku, Tokyo 103-0006 Japan  
<http://www.hario.jp>

**HEATPROOF GLASS**

※This dripper is hand made. Therefore,  
there may be slight variations in color  
and texture between individual products.